


Spool Holder



Spool Holder Attachment

THE DAYS OF STEPPING ON WET, DIRTY, TWISTED, TANGLED WELDING ROD ARE OVER!

SP-100
Includes 5 reusable
empty spools!

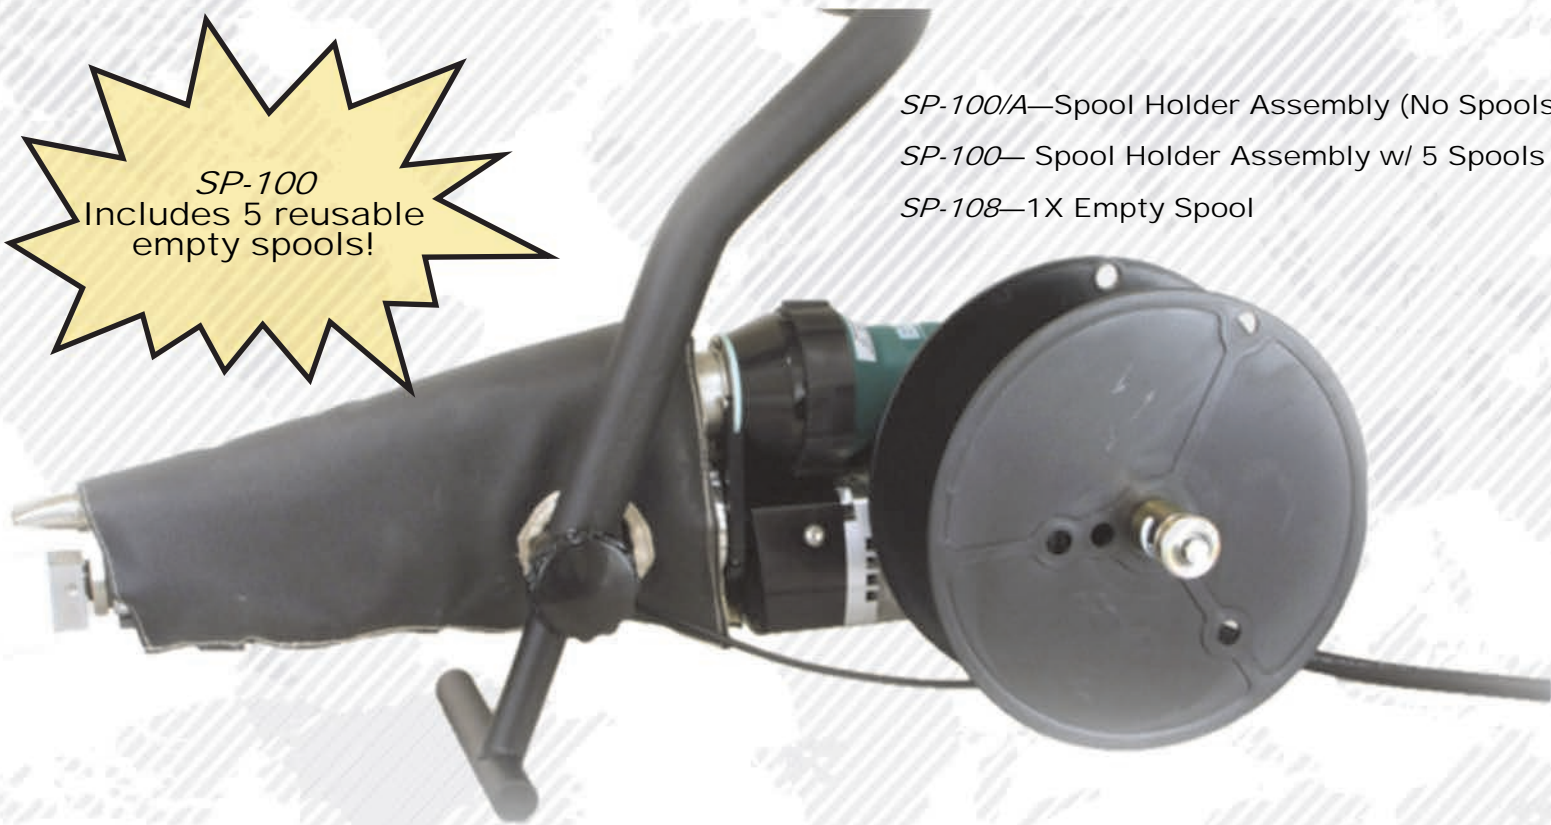

SP-100/A—Spool Holder Assembly (No Spools)

SP-100— Spool Holder Assembly w/ 5 Spools

SP-108—1X Empty Spool



Simply attach any drill to the end of the shaft and load up to 6.5 pounds of 4 or 5 mm welding rod.



The extrusion welder feeds rod directly from spool for continuous, no hassle operation.



Very easy to assemble, simply fasten the shaft block to the housing of the extrusion welder via the provided hose clamps.

Many custom models available upon request.

Call for details. Specifications on reverse.



US & CANADIAN CUSTOMERS

CONTACT US TODAY FOR

INFORMATION ON A TEST DRIVE